







 
 
 

 
 

 
 

 

 
 
 

 

 
 
 
 
 

 
 
 
 
 

 
 


 



 
 


 
 
 

 
 
 


 
 
 

 




 









Original	Substituto	Original	Substituto
 Standby	 Power	 Up	 Up
 Mute	 Mute	 Left	 Left
 Recall	 Back	 OK	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 EPG	 Guide
 5	 5	 Exit	 Exit
 6	 6	 Lang	 Dual
 7	 7	 Audio	 Shift + Dual
 8	 8	 SUB-T	 Subt
 9	 9	 Info	 Info
 0	 0	 FAV	 Pre Ch
 Page +	 Ch +	 TV / Radio	 TV/R
 Page -	 Ch -	 TTX	 Text
 Vol +	 Vol +	 Pause	 Pause
 Vol -	 Vol -	 Red	 Red





Original		Substituto	
	Green		Green
	Yellow		Yellow
	Blue		Blue

Original		Substituto	

