



 


 
 


 


 

 







 



 


 








 

 
 












 

 
 
 
 
 


 




 







Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	Display		Info
	Exit		Exit
	TV / AV		AV
	SYS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	V +		Vol +
	V -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	SMode		Format
	PMode		Shift + Dual
	Sleep		Sleep
	Nicam		Dual
	Hold		Stop
	Index		Media





	Original	Substituto	
	PGUP	 Shift + Ch +	
	Size	 Eject	
	PGDN	 Shift + Ch -	
	Text	 Text	
	Reveal	 Options	
	Subpage	 Subt	
	Red	 Red	
	Green	 Green	
	Yellow	 Yellow	
	Blue	 Blue	

Original	Substituto

