 










































Original	Substituto	Original	Substituto
	Power		Power
	Sleep		Sleep / Timer
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	Mode		D.Menu / Top
	4		4
	5		5
	6		6
	Audio Mode		Audio / Lang I/II
	7		7
	8		8
	9		9
	Sound Select		Sound / Title
	0		0
	Screen Mode		Smart / List

Original	Substituto	Original	Substituto
	Menu		Menu / Home
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	i		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	P +		CH+ / Page+
	Vol -		Vol-
	P -		CH- / Page-
	TV / Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



