



Original	Substituto	Original	Substituto
	Power		Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Back		Back / Return
	Vol+		Vol+
	Scan		Smart / List
	P+		CH+ / Page+

Original	Substituto	Original	Substituto
	Vol-		Vol-
	Zoom		Zoom / Size
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Mute		Mute / Dimmer
	Red / Picture		Red / Netflix / Search
	Red / Picture		Picture / Format
	Green / Sound		Green / APP / Repeat
	Green / Sound		Sound / Title
	Yellow / Sleep		Yellow / YouTube / Repeat
	Yellow / Sleep		Sleep / Timer
	Blue / Call		Blue / Prime Video / Random





Original	Substituto
TEXT	GOTO TEXT Text / Goto
MIX	SHIFT + GOTO TEXT Shift + Text /
SIZE	SHIFT + SIZE ZOOM Shift + Zoom /
INDEX	REC MODE Rec / Rec Mode
HOLD	HOLD Stop / Hold
REVEAL	SLOW Play / Slow
SUBPAGE	EQ SUBTITLE Subtitle / EQ
CANCEL	CLEAR EXIT Exit / Cancel / Clear
DVB MENU	TOP MENU D.MENU D.Menu / Top
i	ANGLE INFO Info / Angle
EPG	GUIDE EPG Guide / EPG / -/--
ESC	PC FAV MARKER Fav / Marker / PC
DVB	MEDIA DISPLAY Display / Media
FREEZE	STEP - FREEZE Pause / Step / Freeze
I/II	LANG I/II Audio / Lang I/II

Original	Substituto

