





Original	Substituto	Original	Substituto
 Power	 Power	 Up	 Up
 Pause / Stop	 Pause	 Left / <<	 Left
 Pause / Stop	 Stop	 Left / <<	 <<
 <<	 <<	 Right / >>	 Right
 >>	 >>	 Right / >>	 >>
 CH +	 + CH	 Play / Enter	 Ok
 CH -	 - CH	 Play / Enter	 Play
 Vol +	 + VOL	 Down	 Down
 Vol -	 - VOL	 [...]	 Subt
 *	 HOME SMART	 Open / Close	 Eject
 Input	 TIMER AV	 Zoom	 Shift + Eject
 TV / DVD Mode	 SEARCH TV/R	 [+]	 Info
 Mute	 MUTE	 1	 1
 Language	 SOUND DUAL	 2	 2
 DVD Menu	 E-MANUAL D.MENU	 3	 3
 DVD Menu	 TOP MENU MENU	 4	 4
 Tools	 SETTINGS OPT	 5	 5



