





 


 

 





 

 



 



 
 
 











 


 


 

 

 



 

 

 












Original	Substituto	Original	Substituto
	Power		Power
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	Recall		Pre Ch
	Subtitulo		Subt
	Audio		Dual
	Back		Back
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Guia		Guide
	P+		Ch +
	P-		Ch -
	Imagen		Format
	Sonido		Options
	Aspecto		3D
	Menu		Menu
	Entrada		AV
	Info		Info
	Salir		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Original		Substituto		Original		Substituto	
	OK		Ok		USB		Media
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<</[≡i]		<<				
	Play		Play				
	Pause/[≡♦]		Pause				
	>>/[≡?]		>>				
	<</[≡o]		<<				
	Stop/[≡+]		Stop				
	>> /[≡x]		>>				
	Rec		Rec				
	[/≡]		Text				
	FAV	+	Shift + Pre Ch				
	Home		Smart				
	Mouse		Eject				

