





 









 




Original	Substituto	Original	Substituto
 Power	 Power	 Cancel	 Exit
 AV Enhancer	 AV	 Play Speed +	 Shift + Up
 FL Select	 Media	 Play Speed -	 Shift + Down
 Open / Close	 Eject	 Position	 Pre Ch
 Multi Re-Master	 Format	 Quick Replay	 Smart
 Repeat	 Text	 Skip	 I <<
 1	 1	 Skip	 >> I
 2	 2	 Slow/Search	 <<
 3	 3	 Slow/Search	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 Direct Navigator / Top Menu	 Shift + Menu
 8	 8	 Direct Navigator / Top Menu	 D. Menu
 9	 9	 Play List / Menu	 Menu
 0	 0	 Up	 Up
 ≧10	 Guide	 Play List / Menu	 List

Original	Substituto	Original	Substituto
 Cancel	 Exit	 Play Speed +	 Shift + Up
 Play Speed -	 Shift + Down	 Position	 Pre Ch
 Quick Replay	 Smart	 Skip	 I <<
 Skip	 >> I	 Slow/Search	 <<
 Slow/Search	 >>	 Stop	 Stop
 Pause	 Pause	 Play	 Play
 Direct Navigator / Top Menu	 Shift + Menu	 Direct Navigator / Top Menu	 D. Menu
 Play List / Menu	 Menu	 Up	 Up
 Play List / Menu	 List		





Original	Substituto
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Return	 Back
 Subtitle	 Subt
 Play Mode	 Shift + Play
 Audio	 Dual
 Zoom	 Shift + Eject
 Angle / Page	 TV/R
 Setup	 Options
 Sleep	 Sleep
 Group	 3D

Original	Substituto

