 


 




 




Original	Substituto	Original	Substituto
 Power	 Power	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Red	 Red
 6	 6	 Green	 Green
 7	 7	 Yellow	 Yellow
 8	 8	 Blue	 Blue
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 List	 List	 Mute	 Mute
 OPT	 Options	 CH+	 Ch +
 Back	 Back	 CH-	 Ch -
 Exit	 Exit	 Menu	 Menu
 EPG	 Guide	 TXT	 Text
 Info	 Info	 TV/♪	 TV/R





Original	Substituto	Original	Substituto
	*		Pre Ch
	APP		Media
	Disp	 	Shift + Info

