

 
 




 




Original	Substituto	Original	Substituto
 Power	 Power	 Display	 Display / Media
 Mute	 Mute / Dimmer	 TV / Radio	 TV/Radio /
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu / Home
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 -/--	 Shift + Guide / EPG / -/--	 Auto	 Eject / Surround
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 EPG	 Guide / EPG / -/--	 Aspect	 Zoom / Size
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Source	 AV / Input / RDS





Original	Substituto	Original	Substituto
P.Mode	Picture / Format	Red	Red / Netflix / Search
S.Mode	Sound / Title	Green	Green / APP / Repeat
Sleep	Sleep / Timer	Yellow	Yellow / YouTube / Repeat
Play/Pause / Text	Play / Slow	Blue	Blue / Prime Video / Random
Play/Pause / Text	Pause / Step / Freeze		
Play/Pause / Text	Text / Goto		
Stop / Index	Stop / Hold		
Mix	Smart / List		
Reveal	Setup / OPT /		
<< / Hold	<< / Tune-		
>> / Subpage	>> / Tune+		
I<< / Size	I<< / Preset-		
>>I / Cancel	>>I / Preset+		
TimeShift	D.Menu / Top		
Rec	Rec / Rec Mode		
FAV-	Shift + CH- /		
FAV+	Shift + CH+ /		

Original	Substituto	Original	Substituto
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

