


 




Original	Substituto
Power	Power
Mute	Mute
[i+]/[?]	Info
A/B/[+]	TV/R
Input/[+]	AV
[]	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide

Original	Substituto
Recall	Back
Timer/[≡i]	List
Timer/[X]	Sleep
Vol+	Vol +
Vol-	Vol -
Prog+	Ch +
Prog-	Ch -
(↔)	Dual
Menu	Menu
Up	Up
Left	Left
OK	Ok
Right	Right
Down	Down
[≡]	Text
Red/Sound	Red
Green/*	Green





Original	Substituto
 Yellow	 Yellow
 Blue/[+]	 Blue

Original	Substituto

