








 







 






 
 



 

 



 



 

 
 
 



 

 

 
 
 
 
 

 

 
 
 



 






Original	Substituto	Original	Substituto
	Power		Power
	Open/Close		Eject
	Function		Media
	[I]/PLII		Dual
	Mute		Mute
	DSP/EQ		Subt
	1/S.Vol		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7/P.Scan		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Disc Menu		D. Menu
	Home		Smart
	Title Menu		Menu
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Tuning Up		Ch +





Original	Substituto	Original	Substituto
Down	Down		
Tuning Down	Ch -		
Right	Right		
Left	Left		
OK	Ok		
Red/Audio Upscale/P.Bass	Red		
Green/S/W	Green		
Yellow/Giga	Yellow		
Blue/Mo/St	Blue		
USB Rec	Rec		
Dimmer	AV		
Repeat	Text		
Tuner Memory	TV/R		

