



Original	Substituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Freeze	 Shift + Pause / Step /
 0	 0
 Aspect Ratio	 D.Menu / Top
 Guide	 Guide / EPG / -/--
 ?	 Shift + Info / Angle
 TXT	 Text / Goto

Original	Substituto
 OPT	 Setup / OPT /
 Back	 Back / Return
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Vol+	 Vol+
 ↑ Page+	 Shift + Up
 CH+	 CH+ / Page+
 Vol-	 Vol-
 ↓ Page-	 Shift + Down
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Substituto	Original	Substituto
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	TV/R  TV/Radio /		
	SUB  Subtitle / EQ		
	LANG  Audio / Lang I/II		
	⌚  Sleep / Timer		
	Rec  Rec / Rec Mode		
	Play  Play / Slow		
	Pause  Pause / Step / Freeze		
	Stop  Stop / Hold		
	<<  << / Tune-		
	I<  I<< / Preset-		
	>I  >>I / Preset+		
	>>  >> / Tune+		

