



Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Freeze		Shift + Pause / Step /
	0		0
	Aspect Ratio		D.Menu / Top
	Guide		Guide / EPG / -/--
	?		Shift + Info / Angle
	TXT		Text / Goto

Original	Substituto	Original	Substituto
	OPT		Setup / OPT /
	Back		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	↑ Page+		Shift + Up
	CH+		CH+ / Page+
	Vol-		Vol-
	↓ Page-		Shift + Down
	CH-		CH- / Page-
	Red		Red / Netflix / Search





Original	Substituto	Original	Substituto
	Green Green / APP / Repeat		
	Yellow Yellow / YouTube / Repeat		
	Blue Blue / Prime Video / Random		
	TV/R TV/Radio /		
	SUB Subtitle / EQ		
	LANG Audio / Lang I/II		
	⏰ Sleep / Timer		
	Rec Rec / Rec Mode		
	Play Play / Slow		
	Pause Pause / Step / Freeze		
	Stop Stop / Hold		
	<< << / Tune-		
	I< I<< / Preset-		
	>I >>I / Preset+		
	>> >> / Tune+		

