


 

 
 




 



 
 
 
 

 


 
 



 
 






 

 

 

 



 



 

 








 
 
 
 





Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TV / DTV		Smart
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Guide		Guide
	Back		Back
	P-		Ch -
	P+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	OO		Shift + Dual
	TV / Radio		TV/R



 


 
 



 











	Original	Substituto	Original	Substituto
	Power	Power		
	Menu	Menu		
	Back	Back		
	OK	Ok		
	Up	Up		
	Down	Down		
	Right	Right		
	Left	Left		
	<<	<<		
	Play	Play		
	>>	>>		
	Stop	Stop		
	Pause	Pause		
	Rec / Top Menu	Rec		
	↑	Ch +		
	↓	Ch -		





	Original	Substituto	Original	Substituto
	Power	 Power		
	<<	 <<		
	Play	 Play		
	>>	 >>		
	Rec	 Rec		
	Pause	 Pause		
	Stop	 Stop		
	Up	 Ch +		
	Down	 Ch -		

