

 
 



 

 
 

 
 
 

 

 
 

 
 
 
 
 
 
 


 



 
 

 
 

 

 

 
 
 

 

 
 


 
 
 
 
 
 






 





Original	Substituto	Original	Substituto
 Standby - On	 Power	 1	 1
 TV / DVD	 AV	 2	 2
 Edit	 TV/R	 3	 3
 Select	 Info	 4	 4
 CH+	 Ch +	 5	 5
 Up	 Up	 6	 6
 Down	 Down	 7	 7
 CH-	 Ch -	 8	 8
 Right	 Right	 9	 9
 Left	 Left	 0	 0
 OK	 Ok	 Stop	 Stop
 Menu Disc	 D. Menu	 Play	 Play
 Menu System	 Menu	 Rec	 Rec
 Timer	 Sleep	 Pause	 Pause
 T/C	 Guide	 Rec Mode	 Shift + Rec
 Browser	 Smart	 I<<	 I<<
 Tuner	 Subt	 >>I	 >>I








 

 
 

 

 
 
 
 
 

 

 


 



Original	Substituto	Original	Substituto
----------	------------	----------	------------

	Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv Vol-		Vol -
	Tv Vol+		Vol +





Original	Substituto
 Standby - On	 Power
 TV / DVD	 TV/R
 Up	 Up
 CH+	 Ch +
 CH-	 Ch -
 Down	 Down
 OK	 Ok
 Menu System	 Menu
 Timer	 Sleep
 T/C	 Guide
 Tuner	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Substituto
 7	 7
 8	 8
 9	 9
 0	 0
 Rec	 Rec
 Return	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv Vol-	 Vol -
 Tv Vol+	 Vol +

