




 


 
 


 
 



 



 

 
 
 

 

 


 
















 



 


















Original	Substituto	Original	Substituto
 Power	 Power	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Guide	 Guide
 3	 3	 Rec List	 List
 4	 4	 Source	 AV
 5	 5	 *	 Menu
 6	 6	 Back	 Back
 7	 7	 Home	 Smart
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+] / [?]	 Info	 Left	 Left
 [=]	 Text	 OK	 Ok
 Google Play	 Media	 Vol+	 Vol +
 Netflix	 Shift + Media	 Vol-	 Vol -
 Red	 Red	 Mute	 Mute
 Green	 Green	 Tv	 TV/R





	Original	Substituto	Original	Substituto
	Recall	PRE-CH		Pre Ch
	CH+	CH		Ch +
	CH-	CH		Ch -
	Audio	SOUND DUAL		Dual
	[...]	AD SUBT		Subt
	Help	SETTINGS OPT		Options
	<<			<<
	Play	PLAY MODE		Play
	>>			>>
	Rec	REC MODE		Rec
	Pause			Pause
	Exit	CLEAR EXIT		Exit

