



Original	Substituto
 Power	 Power
 Input	 AV / Input / RDS
 TV / TXT	 Shift + Text /
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Setup / OPT /
 Nicam/A2	 Shift + Sound / Title
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red / TV/Radio	 Red / Netflix / Search
 Red / TV/Radio	 TV/Radio /
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Vol+	 Vol+

Original	Substituto
 CH-	 CH- / Page-
 Vol-	 Vol-
 Menu	 Menu / Home
 Mute	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVB	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Substituto	Original	Substituto
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	Language		Audio / Lang I/II
	Display / Info		Display / Media
	Zoom		Zoom / Size
	Text		Text / Goto
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	FAV+		Shift + CH+ /

Original	Substituto
	FAV-
	Shift + CH- /

