



Original	Substituto	Original	Substituto
 Power	 Power	 Pause	 Pause
 1	 1	 Sleep	 Sleep
 2	 2	 On screen	 Info
 3	 3	 Menu	 Menu
 4	 4	 Set Menu	 D. Menu
 5	 5	 VCR	 Green
 6	 6	 Video	 Yellow
 7	 7	 DVD/CD	 Blue
 8	 8	 Tuner	 Red
 9	 9	 Status	 Media
 0	 0	 Return	 Back
 Stop/A/B/C/D/E	 Stop	 Test	 Guide
 <</Preset	 <<	 Mute	 Mute
 >>/Preset Up	 >>	 Up	 Up
 >>I/PTY SEEK	 >>I	 Enter	 Ok
 I<</Freq/RDS	 I<<	 Down	 Down
 Play/PTY SEEK	 Play	 Right/CH+	 Right

 




Original	Substituto
 Left/CH-	 Left
 Volume+	 Vol +
 Volume-	 Vol -
 Music	 3D
 Game	 AV
 Sports	 Eject
 Movie	 Format
 [oo]/DTS	 Shift + Dual
 Select	 List
 Matrix 6.1	 Smart
 Stereo	 Options
 Night	 Shift + 5
 SW+	 Shift + 7
 Center+	 Shift + 8
 SURR+	 Shift + 9
 SURR-	 Shift + Pre Ch
 SW-	 Shift + Guide


Original	Substituto
 Center-	 Shift + 0
 Angle	 Pre Ch
 Audio	 Dual
 Subtitle	 Subt
 Repeat	 Text
 A-B	 TV/R



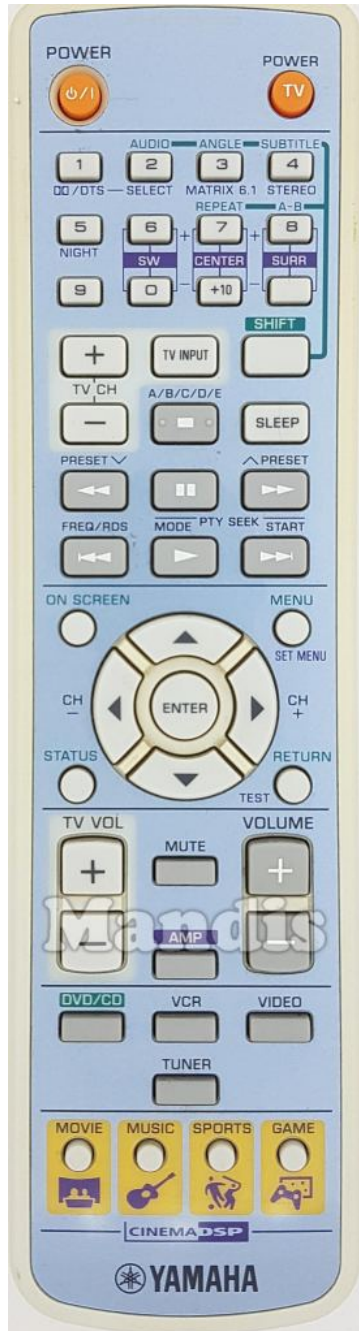

Original	Substituto	Original	Substituto
 Power Tv	 Power		
 Tv CH+	 Ch +		
 Tv CH-	 Ch -		
 Tv Input	 AV		
 Tv Vol+	 Vol +		
 Tv Vol-	 Vol -		



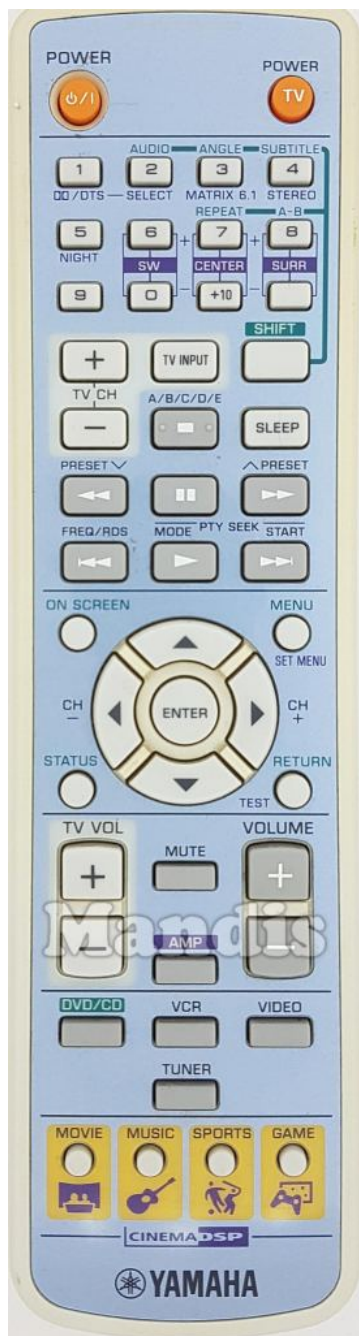 

Original	Substituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
Stop/A/B/C/D/E	Stop
<</Preset	<<
>>/Preset Up	>>
I<<	I<<
Play	Play
>>I	>>I
Volume+	Vol +
Volume-	Vol -

Original	Substituto
Mute	Mute
DVD/CD	Blue
VCR	Green
Video	Yellow
Tuner	Red

