


	Original	Substituto		Original	Substituto
VCR/DVD	Power DVD		Power		Power
REC CHECK	Rec Check		Rec		Rec
<b>1</b>	1	<b>1</b>	1	<b>1</b>	1
<b>2</b>	2	<b>2</b>	2	<b>2</b>	2
<b>3</b>	3	<b>3</b>	3	<b>3</b>	3
<b>4</b>	4	<b>4</b>	4	<b>4</b>	4
<b>5</b>	5	<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0	<b>0</b>	0
-/--	-/--		Guide		Guide
TRACKING/V-LOCK	CH+ / Tracking/V-Lock +		Ch +		Ch +
CH	CH- / Tracking/V-Lock -		Ch -		Ch -
INPUT SELECT	AV / Input Select		AV		AV
VCR/DVD	Output DVD		Media		Media



 






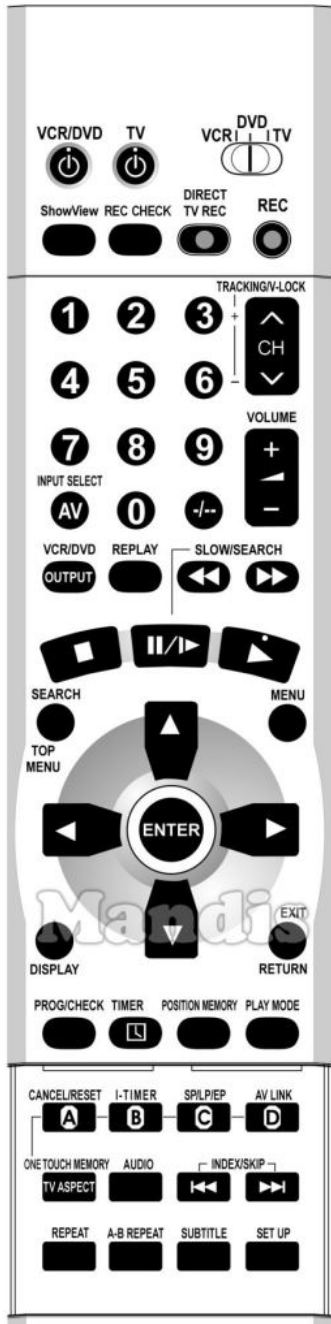










	Original	Substituto		Original	Substituto
SLOW/SEARCH	<< Slow/Search		<<		<<
SEARCH	Slow/Search >>		>>		>>
	Stop		Stop		Stop
	Pause / Step		Pause		Pause
	Play		Play		Play
SEARCH TOP MENU	Top Menu		D. Menu		D. Menu
MENU	Menu		Menu		Menu
	Up		Up		Up
	Left		Left		Left
ENTER	Enter		Ok		Ok
	Right		Right		Right
	Down		Down		Down
DISPLAY	Display		Info		Info
EXIT	Return		Back		Back
TIMER	Timer		Shift + AV		Shift + AV
PLAY MODE	Play Mode		Shift + Play		Shift + Play
POSITION MEMORY	Position		Pre Ch		Pre Ch










 

 



 

 

















 



 








 











 

 



 


Memory





Original	Substituto	Original	Substituto
 Power VCR	 Power	 CH- / Tracking/V-Lock -	 Ch -
 ShowView	 Smart	 AV / Input Select	 AV
 Rec Check	 Options	 Output VCR	 Media
 Direct TV Rec	 Shift + Rec	 Replay	 List
 Rec	 Rec	 << Slow/Search	 <<
 1	 1	 Slow/Search >>	 >>
 2	 2	 Stop	 Stop
 3	 3	 Pause / Step	 Pause
 4	 4	 Play	 Play
 5	 5	 Menu	 Menu
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 -/-	 Guide	 Display	 Info
 CH+ / Tracking/V-Lock +	 Ch +	 Exit	 Exit

Original	Substituto	Original	Substituto
 Power VCR	 Power	 CH- / Tracking/V-Lock -	 Ch -
 ShowView	 Smart	 AV / Input Select	 AV
 Rec Check	 Options	 Output VCR	 Media
 Direct TV Rec	 Shift + Rec	 Replay	 List
 Rec	 Rec	 << Slow/Search	 <<
 1	 1	 Slow/Search >>	 >>
 2	 2	 Stop	 Stop
 3	 3	 Pause / Step	 Pause
 4	 4	 Play	 Play
 5	 5	 Menu	 Menu
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 -/-	 Guide	 Display	 Info
 CH+ / Tracking/V-Lock +	 Ch +	 Exit	 Exit





