




 










 





 













Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	Playmode		3D
	1/Screen		1
	2/SlideShow		2
	3/Rotate		3
	4/Audio		4
	5/Subtitle		5
	6/Sync		6
	7/Playlist		7
	8/Add/Delete		8
	9/List Edit		9
	0/Zoom		0
	Move		Guide
	Scroll		Pre Ch
	Skip+		Ch +
	Skip-		Ch -

Original	Substituto	Original	Substituto
	Stop		Stop
	Go to		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	<<		<<
	Vol+		Vol +
	Vol-		Vol -
	Red/Interval		Red
	Blue/Setup		Blue



