 

 

 


 

 


 



 

 




 












Original	Substituto	Original	Substituto
 POWER	 Power	 GUIDE	 Guide
 TV/Radio	 TV/R	 FAV	 Pre Ch
 EXIT	 Exit	 OK	 Ok
 MENU	 Menu	 UP	 Up
 AUDIO	 Dual	 DOWN	 Down
 MUTE	 Mute	 RIGHT	 Right
 TEXT	 Text	 LEFT	 Left
 1	 1	 VOL+	 Vol +
 2	 2	 VOL-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 SLEEP	 Sleep
 6	 6	 BACK	 Back
 7	 7	 RED	 Red
 8	 8	 GREEN	 Green
 9	 9	 YELLOW	 Yellow
 0	 0	 BLUE	 Blue





Original	Substituto	Original	Substituto
	↑		Shift + Ch +
	↓		Shift + Ch -
	A - B	<td>I<<</td>	I<<
	STEP	<td>>>I</td>	>>I
	STOP	<td>Stop</td>	Stop
	PAUSE	<td>Pause</td>	Pause
<td>REC</td> <td></td> <td>Rec</td>	REC		Rec
	REW	<td><<</td>	<<
	PLAY		Play
	FWD	<td>>></td>	>>
	SUBTITLE		Subt
	V-FORMAT		Format
	INFO		Info
	OPTION		Options
	PLAYLIST		Media
	LIST		List
	TIME		AV
			BOOK
			Smart

