

 
 





 

 


 



 



 




 








 
 



 






 





 

 



 
 










Original		Substituto		Original		Substituto	
	Standby		Power		Display		Info
	Mute		Mute		TV / Radio		TV/R
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		FAV		Pre Ch
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Rec List		List		Rec		Rec
	Recall		Back		Timeshift		Media
	Auto		Smart		CH+		Ch +
	Subtitle		Subt		CH-		Ch -
	Audio		Dual		Source		AV





Original	Substituto
PMode	Shift + Format
SMode	Shift + Dual
Sleep	Sleep
Text	Text
Hold	Shift + Stop
Reveal	3D
Subpage	Shift + Subt
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
Index	D. Menu
Size	Format
<<<	<<<
>>>	>>>
<<<	<<<
>>>	>>>
Red	A

Original	Substituto
Green	Green
Yellow	Yellow
Blue	Blue

