





 




 



 
 
 

 



 

 



 

 




Original	Substituto	Original	Substituto
 Power Receiver	 Power	 Muting	 Mute
 Display	 Info	 Vol+	 Vol +
 BD / DVD	 1	 Vol-	 Vol -
 VCR / DVR	 2	 Home	 Smart
 CBL / SAT	 3	 CH+	 Ch +
 GAME	 4	 CH-	 Ch -
 PC	 5	 SP Layout	 D. Menu
 AUX	 6	 Menu	 Menu
 TUNER	 AV	 Up	 Up
 TUNER	 7	 Left	 Left
 TV / CD	 8	 Enter	 Ok
 PHONO	 9	 Right	 Right
 PORT	 Guide	 Down	 Down
 NET	 Shift + Media	 Setup	 Options
 NET	 0	 Return	 Back
 USB	 Media	 I<<	 I<<
 USB	 Pre Ch	 >>I	 >>I






Original	Substituto	Original	Substituto
	<<		6
	Play		7
	>>		8
	Pause / Play Rev.		9
	Stop		0
	Movie / TV		Shift + 6
	Music		Shift + 7
	Game		Shift + 8
	Thx		Shift + 9
	Dimmer		Shift + 0
	D.TUN		
	Sleep		
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5





 


 
 



 
 








 






Original	Substituto	Original	Substituto
 Power Receiver	 Power	 Vol+	 Vol +
 BD / DVD	 1	 Vol-	 Vol -
 VCR / DVR	 2	 Home	 Smart
 CBL / SAT	 3	 CH+ / Album+	 Ch +
 GAME	 4	 CH- / Album-	 Ch -
 PC	 5	 Top Menu	 D. Menu
 AUX	 6	 Menu	 Menu
 TUNER	 AV	 Up	 Up
 TUNER	 7	 Page- / Playlist-	 Left
 TV / CD	 8	 Enter	 Ok
 PHONO	 9	 Page+ / Playlist+	 Right
 PORT	 Guide	 Down	 Down
 NET	 Shift + Media	 Setup	 Options
 NET	 0	 Return	 Back
 USB	 Media	 I<<	 I<<
 USB	 Pre Ch	 >>I	 >>I
 Muting	 Mute	 <<	 <<












Original	Substituto	Original	Substituto
	Play		Play
	>>		>>
	Pause / Play Rev.		Pause
	Stop		Stop
	Search		TV/R
	Search		Red
	Repeat		Green
	Repeat		Text
	Random		Yellow
	Mode		Blue
	Mode	 + 	Shift + Play
	1	 + 	Shift + 1
	2	 + 	Shift + 2
	3	 + 	Shift + 3
	4	 + 	Shift + 4
	5	 + 	Shift + 5
	6	 + 	Shift + 6

Original	Substituto	Original	Substituto
	7	 + 	Shift + 7
	8	 + 	Shift + 8
	9	 + 	Shift + 9
	0	 + 	Shift + 0
	--/-- +10	 + 	Shift + Guide
	Sleep		Sleep
	Display		Info
	CLR		Exit





Original		Substituto		Original		Substituto	
	Power Receiver		Power		Muting		Mute
	Display		Info		Vol+		Vol +
	BD / DVD		1		Vol-		Vol -
	VCR / DVR		2		Home		Smart
	CBL / SAT		3		CH+		Ch +
	GAME		4		CH-		Ch -
	PC		5		SP Layout		Shift + Menu
	AUX		6		Menu		Menu
	TUNER		7		Up		Up
	TV / CD		8		Left		Left
	PHONO		9		Enter		Ok
	TUNER		AV		Right		Right
	PORT		Guide		Down		Down
	NET		0		Setup		Options
	NET		Shift + Media		Return		Back
	USB		Pre Ch		I<<		I<<
	USB		Media		>>I		>>I






Original	Substituto	Original	Substituto
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Movie / TV		Red
	Music		Green
	Game		Yellow
	Thx		Blue
	Dimmer		Dual
	D.TUN		TV/R
	Sleep		Sleep
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5
	6		Shift + 6
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0



 
 
 







 



 
 
 








Original	Substituto	Original	Substituto
 Power	 Power	 Muting	 Mute
 Display	 Info	 Vol+	 Vol +
 BD / DVD	 1	 Vol-	 Vol -
 VCR / DVR	 2	 Home	 Smart
 CBL / SAT	 3	 CH+	 Ch +
 GAME	 4	 CH-	 Ch -
 PC	 5	 SP Layout	 Shift + Menu
 AUX	 6	 Menu	 Menu
 TUNER	 7	 Up	 Up
 TUNER	 AV	 Left	 Left
 TV / CD	 8	 Enter	 Ok
 PHONO	 9	 Right	 Right
 PORT	 Guide	 Down	 Down
 NET	 0	 Setup	 Options
 NET	 Shift + Media	 Return	 Back
 USB	 Pre Ch	 I<<	 I<<
 USB	 Media	 >>I	 >>I





Original	Substituto
	 <<
	 >>
	 Play
	 Pause
	 Stop
	 Red
	 Green
	 Yellow
	 Blue
	 Dual
	 TV/R
	 Sleep
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5

Original	Substituto
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0

