



| Original | Substituto | Original | Substituto |
|----------|----------------|----------|------------------------|
| | Power | | Power |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | P+ | | CH+ / Page+ |
| | P- | | CH- / Page- |
| | Vol + | | Vol + |
| | Vol - | | Vol - |
| | Open/Cl ose | | Ej ect / Surround |
| | Gui de | | Gui de / EPG / - / - |
| | Mut e | | Mut e / Di mmer |
| | I << | | I << / Preset - |
| | >> I | | >> I / Preset + |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | St op | | St op / Hol d |
| | Pause | | Pause / Step / Freeze |
| | Pl ay | | Pl ay / Sl ow |
| | I nf o | | I nf o / Angl e |
| | Exi t | | Exi t / Cancel / Clear |
| | Medi a Cent er | | Di spl ay / Medi a |
| | Up | | Up |
| | Home Menu | | Menu / Home |
| | Pop- Up Menu | | D. Menu / Top |
| | Down | | Down |
| | Lef t | | Lef t |
| | Ri ght | | Ri ght |



