





 

 











 



 







 

 















| | Original | Substituto | Original | Substituto |
|--|---|---|---|---|
| |  Display |  Display / Media |  >> /Preset+ |  >> / Preset+ |
| |  Power |  Power |  <</Tuning- |  << / Tune- |
| |  Function- |  Shift + Down |  Stop |  Stop / Hold |
| |  Function+ |  Shift + Up |  >>/Tuning+ |  >> / Tune+ |
| |  Sound |  Sound / Title |  Vol+ |  Vol+ |
| |  Menu |  Menu / Home |  Vol- |  Vol- |
| |  Timer |  Sleep / Timer | | |
| |  Up |  Up | | |
| |  Folder- |  CH- / Page- | | |
| |  OK |  OK | | |
| |  Folder+ |  CH+ / Page+ | | |
| |  Down |  Down | | |
| |  Return |  Back / Return | | |
| |  Clear |  Exit / Cancel / Clear | | |
| |  I<</Preset- |  I<< / Preset- | | |
| |  Play |  Play / Slow | | |
| |  Pause |  Pause / Step / Freeze | | |

