



 
 




 



| Original | Substituto | Original | Substituto                  |
|----------|------------|----------|-----------------------------|
|          | Mute       |          | Mute / Dimmer               |
|          | Power      |          | Power                       |
|          | 1          |          | 1                           |
|          | 2          |          | 2                           |
|          | 3          |          | 3                           |
|          | 4          |          | 4                           |
|          | 5          |          | 5                           |
|          | 6          |          | 6                           |
|          | 7          |          | 7                           |
|          | 8          |          | 8                           |
|          | 9          |          | 9                           |
|          | Tv Portal  |          | D.Menu / Top                |
|          | 0          |          | 0                           |
|          | Menu       |          | Menu / Home                 |
|          | Play       |          | Play / Slow                 |
|          | Pause      |          | Pause / Step / Freeze       |
|          | Stop       |          | Stop / Hold                 |
|          | Rec        |          | Rec / Rec Mode              |
|          | <<         |          | << / Tune-                  |
|          | >>         |          | >> / Tune+                  |
|          | I<<        |          | I<< / Preset-               |
|          | >>I        |          | >>I / Preset+               |
|          | Red        |          | Red / Netflix / Search      |
|          | Green      |          | Green / APP / Repeat        |
|          | Yellow     |          | Yellow / YouTube / Repeat   |
|          | Blue       |          | Blue / Prime Video / Random |
|          | Media      |          | Display / Media             |
|          | Up         |          | Up                          |
|          | Guide      |          | Guide / EPG / -/--          |
|          | Left       |          | Left                        |
|          | OK         |          | OK                          |
|          | Right      |          | Right                       |
|          | Exit       |          | Exit / Cancel / Clear       |
|          | Down       |          | Down                        |





| Original  | Substituto  |
|---|---|
|    |  Back / Return               |
|    |  Vol+                        |
|    |  Smart / List                |
|    |  CH+ / Page+                 |
|    |  Vol-                        |
|    |  Info / Angle                |
|    |  CH- / Page-                 |
|    |  Setup / OPT /               |
|    |  Audio / Lang I/II           |
|    |  Subtitle / EQ               |
|   |  TV/Radio /                 |
|  |  Text / Goto               |
|  |  Shift + Fav / Marker / PC |
|  |  Fav / Marker / PC         |
|  |  Shift + Play /            |
|  |  AV / Input / RDS          |
|  |  Sleep / Timer             |

| Original  | Substituto   |
|---|--|
|  |  Picture / Format |
|  |  Zoom / Size      |

