

 
 
 

 
 

 


 
 

 
 




 
 

 
 




Original	Substituto	Original	Substituto
 Power	 Power	 [O]/Repeat	 Pre Ch
 Goto	 Smart	 Input	 AV
 Eject	 Eject	 EPG/?/A-B	 Guide
 Setup	 Options	 Vol+	 Vol +
 Title	 List	 Vol-	 Vol -
 Mute	 Mute	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Zoom	 Shift + Eject
 8	 8	 Menu	 Menu
 9	 9	 ←	 Back
 0/FAV	 0	 i	 Info
 16:9 / Angle	 Format	 Red	 Red





Original	Substituto	Original	Substituto
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Play/Pause		Play
	<<		<<
	Stop		Stop
	>>		>>
	I<<		I<<
	>>I		>>I
	[...] / Double		Subt
	Audio / Update		Dual
	TXT		Text

