



 


 

 
 


 





 




 
 
 

 





 


 
 

 








 







 










	Original	Substituto		Original	Substituto
	Power		Power		CH+
	ShowView		3D		CH-
	AV		AV		Vol+
	Direct Tv Rec		TV/R		Vol-
	Rec		Rec		HDD
	1		1		DVD
	2		2		<< Slow/Search
	3		3		Slow/Search >>
	4		4		Stop
	5		5		Pause
	6		6		Play
	7		7		Top Menu / Direct Navigator
	8		8		D. Menu
	9		9		Menu / Play List
	0		0		Up
	-/--		Guide		Left
	Cancel		Exit		Enter
					Right

	Original	Substituto
	CH+	
	CH-	
	Vol+	
	Vol-	
	HDD	
	DVD	
	<< Slow/Search	
	Slow/Search >>	
	Stop	
	Pause	
	Play	
	Top Menu / Direct Navigator	
	Menu / Play List	
	Up	
	Left	
	Enter	
	Right	





Original	Substituto
 Down	 Down
 Functions	 Options
 Return	 Back
 Prog/Check	 Sleep
 Timer	 Shift + AV
 Display	 Info
 Time Slip	 Text
 Dubbing	 Subt
 Rec Mode	 Shift + Rec
 I<< Skip	 I<<
 Skip >>I	 >>I
 A/Input Select	 Eject
 B/Status	 List
 C/AV Link	 Yellow
 D/Manual Skip	 Format
 Erase	 Dual
 Audio	 Shift + Dual

Original	Substituto
 Position	 Green
 Marker	 Pre Ch





