

 

 

 




 








 












Original	Substituto	Original	Substituto
	Power MD		Power
	Direct Tuning		Text
	Dimmer		Pre Ch
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	MD		Media
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Stop MD		Stop
	Play MD		Play
	<</ << MD		<<
	>>/>> MD		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	1 MD		1
	2 MD		2
	3 MD		3
	4 MD		4
	5 MD		5
	6 MD		6
	7 MD		7
	8 MD		8
	9 MD		9














 



 

 
 
 

 

 



 


 








 

 


 



 

 

 





 



 





Original	Substituto
0 MD	0
>10/-/- MD	Guide
Tv/AV	AV
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
Power TV	Shift + Power
Tv Vol Up	Shift + Vol +
Tv Vol Down	Shift + Vol -
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3

Original	Substituto
4 Tv	Shift + 4
5 Tv	Shift + 5
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
>10/-/- Tv	Shift + Guide

 


 
 

 





Original	Substituto	Original	Substituto
 Power DVD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 VCR	 Smart	 Enter	 Ok
 Tuner/Band	 Green	 Stereo	 Dual
 Tape	 Red	 Surround	 Options
 MD	 Media	 SFC	 Subt
 CD	 Yellow	 Test	 Back
 DVD	 Blue	 Delay	 Format
 Play DVD	 Play	 Level	 3D
 I<<</>>I DVD	 <<<	 +	 Ch +
 Stop DVD	 Stop	 -	 Ch -
 >>>/<<<I DVD	 >>>	 1 DVD	 1
 Top Menu/Disc/Deck	 Menu	 2 DVD	 2
 Display	 Info	 3 DVD	 3
 Menu	 D. Menu	 4 DVD	 4
 Up	 Up	 5 DVD	 5
 Down	 Down	 6 DVD	 6




 



 



 

 

 



 



 
 









 














 







 



 










Original	Substituto	Original	Substituto
	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play



 







Original	Substituto	Original	Substituto
 Power VCR	 Power	 5 VCR	 5
 Dimmer	 Pre Ch	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu

1/2





Original	Substituto
 Display	 Info
 Menu	 D. Menu
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6

Original	Substituto
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

