 

 




 



 
 
 

 

 

 





 


 
 




 
 
 
 


 






 





 




 













Original	Substituto	Original	Substituto
	Power		Power
	USB		Smart
	Radio		TV/R
	Coax		3D
	AUX		AV
	MP3 Link		Media
	Audio		Dual
	Setup		Menu
	Back		Back
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	>>		>>
	<<		<<
	<		<<
	Play/Pause		Play
	>		>>
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Surround		Options
	Treble		Ch +
	Bass		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Original		Substituto		Original		Substituto	
[8]	8	[8]	8				
[9]	9	[9]	9				
[0]	0	[0]	0				
[SUBTITLE]	Subtitle	[AD SUBT]	Subt				
[AUDIO SYNC]	Audio Sync	[FAV PRE-CH]	Pre Ch				
[REPEAT PROGRAM]	Repeat/Program	[REPEAT TEXT]	Text				
[REPEAT A-B]	Repeat A-B	[DISC NAV LIST]	List				
[ZOOM]	Zoom	[ZOOM]	Eject				
[SOUND MODE]	Sound Mode	[B]	Green				

