 
 





Original	Substituto
 Power	 Power
 Input AUX	 Shift + 7
 Input PHONO	 Shift + 0
 Input TAPE1	 Shift + 5
 Input TUNER	 Shift + 6
 Input CD	 Shift + 3
 Input VCR 2	 Shift + 9
 Input VCR 1	 Shift + 4
 Input TV / DBS	 Shift + 1
 Input LD	 Shift + 2
 Input TAPE 2 MON	 Shift + 8
 I << / Chapt er-	 I << / Preset-
 >> / Chapt er +	 >> / Preset +
 Pause / St op	 Pause / Step / Freeze
 Pause / St op	 St op / Hol d
 Pl ay	 Pl ay / Sl ow
 Di spl ay	 Di spl ay / Medi a

Original	Substituto
 << Sear ch	 << / Tune-
 Sear ch >>	 >> / Tune+
 Dat - Tape- Vcr Dir	 Sound / Ti tle
 Dat - Tape- Vcr Pl a	 Shift + Pl ay /
 Dat - Tape- Vcr Dir	 Audi o / Lang I/II
 Dat - Tape- Vcr Deck A/B	 Subti tle / EQ
 Dat - Tape- Vcr	 Shift + << /
 Dat - Tape- Vcr St op	 Shift + St op /
 Dat - Tape- Vcr	 Shift + >> /
 Test	 Text / Got o
 Tuner - Vcr - Tv A/ B/ C/ D/ E/ F	 Smart / Li st
 Tuner - Vcr - Tv Preset/ CH-	 CH+ / Page+
 Tuner - Vcr - Tv Preset/ CH+	 CH- / Page-
 Front Level +	 Shift + Vol +
 Hal l 1	 1
 Hal l 2	 2
 Hal l 3	 3





Original	Substituto	Original	Substituto
Church	4	Left	Left
Front Level -	+ Vol -	Set Menu -	+ Shift + Left
Rock Concert	5	Parameter +	Right
Jazz Club	6	Set Menu +	+ Shift + Right
Concert Video	7	Master Volume -	Vol -
Disco	8	Rear Level -	+ Shift + CH /
Center Level +	+ Shift + Smart / List	Effect On/Off	OK
TV Theater	9	Parameter	Down
Movie Theater	Guide / EPG / - / -	Set Menu Down	+ Shift + Down
Stadium	0	Muting	Mute / Dimmer
12 / DD Pro Logic	Fav / Marker / PC		
Center Level -	+ Shift + Display / Media		
On Screen	Info / Angle		
Parameter Up	Up		
Set Menu Up	+ Shift + Up		
Master Volume	Vol +		
Rear Level +	+ Shift + CH /		

Original	Substituto	Original	Substituto
Left	Left	Set Menu -	+ Shift + Left
Parameter +	Right	Set Menu +	+ Shift + Right
Master Volume -	Vol -	Rear Level -	+ Shift + CH /
Effect On/Off	OK	Parameter	Down
Set Menu Down	+ Shift + Down	Muting	Mute / Dimmer











 

 

 

 

 

 



 

 

 

 
 
 

 


 
 

 



 

















Original	Substituto
 Power	 Power
 Input AUX	 Shift + 7
 Input PHONO	 Shift + 0
 Input TAPE1	 Shift + 5
 Input TUNER	 Shift + 6
 Input CD	 Shift + 3
 Input VCR 2	 Shift + 9
 Input VCR 1	 Shift + 4
 Input TV / DBS	 Shift + 1
 Input LD	 Shift + 2
 Input TAPE 2 MON	 Shift + 8
 I << / Chapter-	 I << / Preset-
 >> / Chapter+	 >> / Preset+
 Pause / Stop	 Pause / Step / Freeze
 Pause / Stop	 Stop / Hold
 Play	 Play / Slow
 Display	 Display / Media

Original	Substituto
 I < Still	 Shift + I << / Preset-
 Still >	 Shift + >> / Preset+
 << Search	 << / Tune-
 Search >>	 >> / Tune+
 Tape-Vcr Dir A	 Sound / Title
 Tape-Vcr Play	 Shift + Play /
 Tape-Vcr Dir B	 Audio / Lang I/II
 Tape-Vcr Deck	 Subtitle / EQ
 Tape-Vcr <<	 Shift + << /
 Tape-Vcr Stop	 Shift + Stop /
 Tape-Vcr >>	 Shift + >> /
 Test	 Text / Got o
 Tuner-Vcr-Tv A/B/C/D/E/F	 Smart / Li st
 Tuner-Vcr-Tv Preset/CH-	 CH / Page-
 Tuner-Vcr-Tv Preset/CH+	 CH+ / Page+
 Front Level +	 Shift + Vol +
 Hal l 1	 1





Original	Substituto	Original	Substituto
 Hall 2	 2	 Master Volume	 Vol +
 Hall 3	 3	 Rear Level +	 Shift + CH /
 Church	 4	 Parameter -	 Left
 Front Level -	 Shift + Vol -	 Set Menu -	 Shift + Left
 Rock Concert	 5	 Parameter +	 Right
 Jazz Club	 6	 Set Menu +	 Shift + Right
 Concert Video	 7	 Master Volume	 Vol -
 Disco	 8	 Rear Level -	 Shift + CH /
 Center Level +	 Shift + Smart / List	 Effect On/Off	 OK
 TV Theater	 9	 Parameter	 Down
 Movie Theater	 Guide / EPG / - / -	 Set Menu Down	 Shift + Down
 Stadium	 0	 Muting	 Mute / Dimmer
 12 / DD Pro Logic	 Fav / Marker / PC		
 Center Level -	 Shift + Display / Media		
 On Screen	 Info / Angle		
 Parameter Up	 Up		
 Set Menu Up	 Shift + Up		

Original	Substituto	Original	Substituto
 Hall 2	 2	 Master Volume	 Vol +
 Hall 3	 3	 Rear Level +	 Shift + CH /
 Church	 4	 Parameter -	 Left
 Front Level -	 Shift + Vol -	 Set Menu -	 Shift + Left
 Rock Concert	 5	 Parameter +	 Right
 Jazz Club	 6	 Set Menu +	 Shift + Right
 Concert Video	 7	 Master Volume	 Vol -
 Disco	 8	 Rear Level -	 Shift + CH /
 Center Level +	 Shift + Smart / List	 Effect On/Off	 OK
 TV Theater	 9	 Parameter	 Down
 Movie Theater	 Guide / EPG / - / -	 Set Menu Down	 Shift + Down
 Stadium	 0	 Muting	 Mute / Dimmer
 12 / DD Pro Logic	 Fav / Marker / PC		
 Center Level -	 Shift + Display / Media		
 On Screen	 Info / Angle		
 Parameter Up	 Up		
 Set Menu Up	 Shift + Up		

