

 









Original	Substituto	Original	Substituto
 Power	 Power	 Yellow / FAV	 Pre Ch
 Mute	 Mute	 Blue / SLP	 Blue
 Up / CH+	 Up	 Zoom	 Eject
 Up / CH+	 Ch +	 Freeze	 Pause
 Left / Vol-	 Left	 Blue / SLP	 Sleep
 Left / Vol-	 Vol -	 DSP / CAPS	 Info
 Right / Vol+	 Right	 Recall	 Back
 Right / Vol+	 Vol +	 1	 1
 Down / CH-	 Ch -	 2	 2
 Down / CH-	 Down	 3	 3
 Enter	 Ok	 4	 4
 Menu	 Menu	 5	 5
 Red / P.M	 Red	 6	 6
 Red / P.M	 Format	 7	 7
 Green / S.M	 Green	 8	 8
 Green / S.M	 Shift + Dual	 9	 9
 Yellow / FAV	 Yellow	 0	 0





Original	Substituto
	GUIDE Guide
	TIMER AV AV
	HOME SMART Smart
	APP MEDIA Media
	SHIFT + HOME SMART Shift + Smart
	SEARCH TV/R TV/R
	SHIFT + SEARCH TV/R Shift + TV/R
	SHIFT + TIMER AV Shift + AV
	SOUND DUAL Dual
	CLEAR EXIT Exit
	REPEAT TEXT Text
	SHIFT + REPEAT TEXT Shift + Text
	STOP Stop
	SETTINGS OPT Options
	AD SUBT Subt
	SHIFT + ZOOM Eject

Original	Substituto

