




 

 



 



 

 

 

 

 

 
 

 









Original	Substituto
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 Recall	 Pre Ch
 Prime Video	 Shift + Smart
 Home	 Smart
 Q.Menu	 D. Menu

Original	Substituto
 YouTube	 Shift + Media
 Menu	 Menu
 Up	 Up
 Netflix	 Media
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Exit	 Exit
 Vol+	 Vol +
 Back	 Back
 Vol-	 Vol -
 Guide	 Guide
 Mute	 Mute
 Ch+	 Ch +
 Ch-	 Ch -
 Red	 Red





Original		Substituto		Original	Substituto
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Index / Play/Pause		Shift + Info		
	Index / Play/Pause		Play		
	Index / Play/Pause		Pause		
	Hold / Stop		Stop		
	Mix		Shift + Text		
	Text / I<<		Text		
	Text / I<<		I<<		
	Size / >>I		Eject		
	Size / >>I		>>I		
	Audio Lang I/II		Dual		
	Reveal / <<		<<		
	Cancel / >>		>>		
	Subtitle		Subt		

