
 






 


Original		Substituto		Original		Substituto	
	Power		Power		Picture		Format
	Mute		Mute		AV		AV
	1		1		Menu		Menu
	2		2		PR+		Ch +
	3		3		Up		Up
	4		4		PR-		Ch -
	5		5		Down		Down
	6		6		Right		Right
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		Left		Left
	0		0		Up VCR		Shift + Ch -
	Red/Zoom		Red		UP [≡]		Shift + Text
	Green/00		Green		Up DVD		Shift + Up
	Yellow		Yellow		Down VCR		Shift + Ch +
	Blue		Blue		Down DVD		Shift + Down
	Text		Text		<< VCR		Shift + <<





Original	Substituto	Original	Substituto
 << DVD	 <<		
 Play/[?] VCR	 +  Shift + Play		
 Play/[?] [≡]	 Eject		
 Play/[?] DVD	 Play		
 >>/[+] VCR	 +  Shift + >>		
 >>/[+] [≡]	 +  Shift + Right		
 >>/[+] DVD	 >>		
 Rec VCR	 +  Shift + Rec		
 Stop/[X] VCR	 +  Shift + Stop		
 Stop/[X] [≡]	 EXIT		
 Stop/[X] DVD	 Stop		
 Standby/[≡i] VCR	 +  Shift + Power		
 Standby/[≡i] [≡]	 MEDIA		
 Standby/[≡i] DVD	 SMART		
 i/Timer	 INFO		
 O))/	 DUAL		

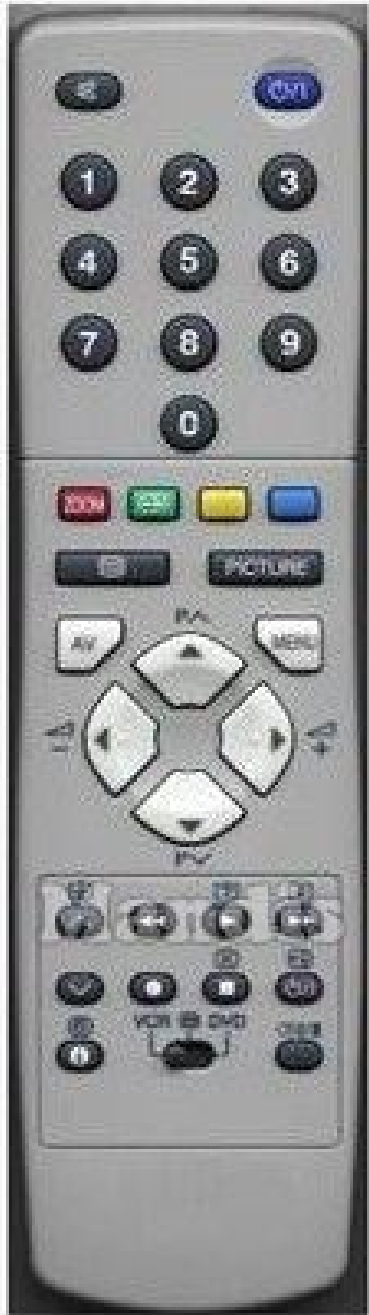