


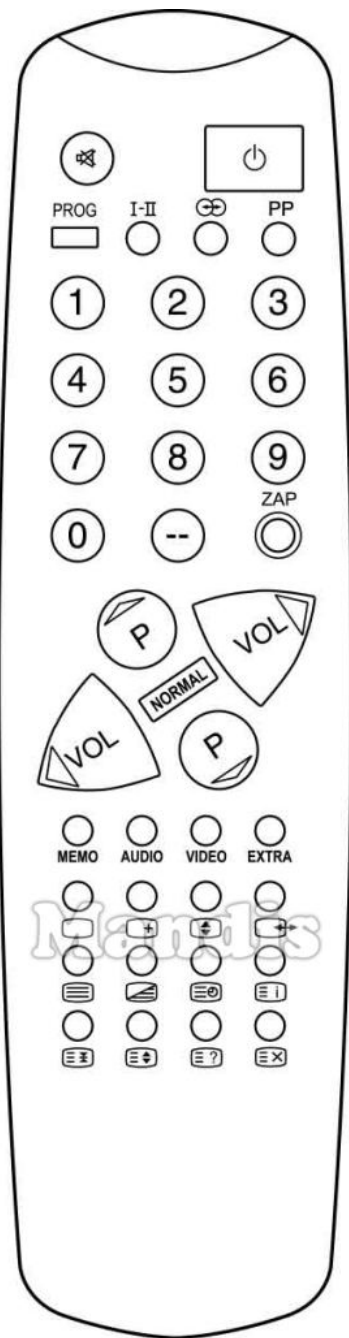

Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --
	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[]		Display / Media
	[+]		Stop / Hold





	Original	Substituto		Original	Substituto
	[◊]	 Setup / OPT /			
	[]↔	 D.Menu / Top			
	[≡]	 Text / Goto			
	[/≡]	 +  Shift + Text /			
	[≡ ⊙]	 Subtitle / EQ			
	[≡]	 Info / Angle			
	[≡ □]	 Pause / Step / Freeze			
	[≡ ◊]	 Zoom / Size			
	[≡ ?]	 AV / Input / RDS			
	[≡ X]	 Exit / Cancel / Clear			

