


| Original | Substituto | Original | Substituto |
|----------|----------------|----------|-----------------------------|
| | Mute | | Mute / Dimmer |
| | Power | | Power |
| | Prog | | TV/Radio / |
| | I-II | | Audio / Lang I/II |
| | O to O | | Sound / Title |
| | PP | | Back / Return |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | -- | | Guide / EPG / -- |
| | ZAP | | Smart / List |
| | Up / P+ | | Up |
| | Up / P+ | | CH+ / Page+ |
| | Right / Vol+ | | Right |
| | Right / Vol+ | | Vol+ |
| | Left / Vol- | | Left |
| | Left / Vol- | | Vol- |
| | Normal | | OK |
| | Down / P- | | Down |
| | Down / P- | | CH- / Page- |
| | Red / Memo | | Red / Netflix / Search |
| | Green / Audio | | Green / APP / Repeat |
| | Green / Audio | | Shift + Audio / Lang I/II |
| | Yellow / Video | | Yellow / YouTube / Repeat |
| | Blue / Extra | | Blue / Prime Video / Random |
| | [] | | Display / Media |
| | [+] | | Stop / Hold |

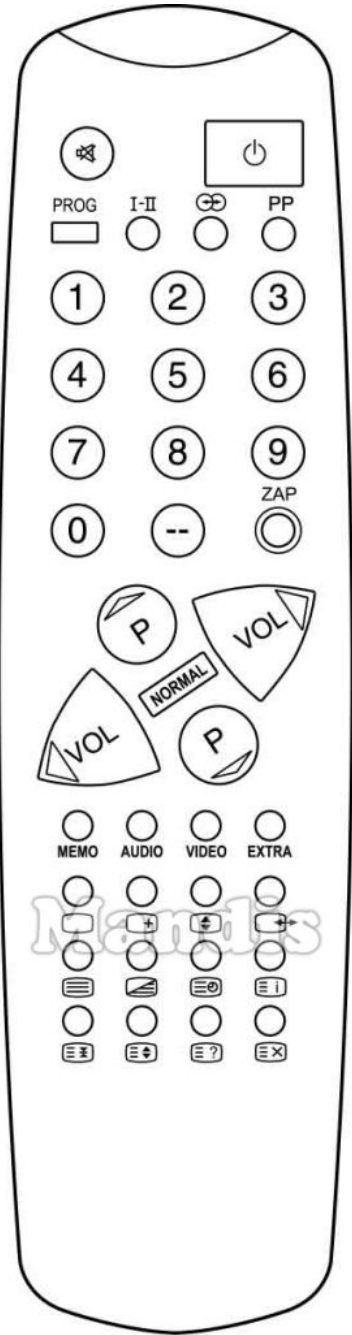



| Original | Substituto |
|----------|---|
| [♦] | SETUP Setup / OPT / |
| []↔ | D.MENU D.Menu / Top |
| [≡] | TEXT Text / Goto |
| [/≡] | SHIFT + GOTO Shift + Text / |
| [≡ ⊕] | EQ Subtitle / EQ |
| [≡ i] | INFO Info / Angle |
| [≡ □] | II Pause / Step / Freeze |
| [≡ ♦] | ZOOM Zoom / Size |
| [≡ ?] | RDS AV INPUT AV / Input / RDS |
| [≡ X] | EXIT Exit / Cancel / Clear |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Substituto |
|----------|------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

