


 



 









 

 

 








 
 


 


















 


 




 










Original	Substituto	Original	Substituto
 Power	 Power	 Green / Sleep	 Green
 Mute	 Mute	 Green / Sleep	 Sleep
 1	 1	 Yellow / Q.View	 Yellow
 2	 2	 Blue / List	 Blue
 3	 3	 Blue / List	 List
 4	 4	 Up / PR+	 Up
 5	 5	 Up / PR+	 Ch +
 6	 6	 Down / PR-	 Down
 7	 7	 Down / PR-	 Ch -
 8	 8	 Right / Vol+	 Right
 9	 9	 Right / Vol+	 Vol +
 0	 0	 Left / Vol-	 Left
 Menu	 Menu	 OK	 Ok
 TV / AV	 AV	 PSM	 Format
 Red / I/II	 Red	 SSM	 Shift + Dual
 Red / I/II	 Dual	 PC/*	 Smart
 Left / Vol-	 Vol -	 ARC/*	 Media

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 SHIFT	
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 Fast Forward	 Fast Forward
 Fast Reverse	 Fast Reverse	 SOUND	 AD
 LIST	 LIST	 OPT	 OPT
 SEARCH	 SEARCH	 PICTURE ECO	 PICTURE ECO
 SLEEP	 SLEEP	 3D	 3D
 E-MANUAL	 E-MANUAL	 TIMER	 TIMER
 D.MENU	 D.MENU	 AV	 AV
 TOP MENU	 TOP MENU	 DISPLAY INFO	 DISPLAY INFO
 MENU	 MENU	 OK	 OK
 CLEAR	 CLEAR	 RETURN BACK	 RETURN BACK
 EXIT	 EXIT	 HOME	 HOME
 VOL +	 VOL +	 SMART	 SMART
 VOL -	 VOL -	 APP MEDIA	 APP MEDIA
 1	 1	 CH +	 CH +
 2	 2	 CH -	 CH -
 3	 3	 HOME	 HOME
 4	 4	 APP MEDIA	 APP MEDIA
 5	 5	 VOL +	 VOL +
 6	 6	 VOL -	 VOL -
 7	 7	 OK	 OK
 8	 8	 PSM	 PSM
 9	 9	 SSM	 SSM
 0	 0	 PC/*	 PC/*
 GUIDE	 GUIDE	 ARC/*	 ARC/*
 0	 0	 HOME SMART	 HOME SMART
 PRE-CH	 PRE-CH	 APP MEDIA	 APP MEDIA
 A	 A	 A	 A
 B	 B	 B	 B
 C	 C	 C	 C
 D	 D	 D	 D



