















Original	Substituto	Original	Substituto
 Power	 Power	 Top Menu	 Menu / Home
 Up /	 Up	 Rec	 Rec / Rec Mode
 TV / Video	 TV/Radio /	 << / I<<	 << / Tune-
 Down /	 CH- / Page-	 i / Setup	 Setup / OPT /
 Eject	 Eject / Surround	 Play	 Play / Slow
 DVD	 Shift + 2	 >> / >>I	 >> / Tune+
 Video	 Shift + 4	 Slow	 Shift + Play /
 Display / Clock/Counter	 Display / Media	 Pause / Frame	 Pause / Step / Freeze
 Input Select	 AV / Input / RDS	 Program	 Shift + TV/Radio / Program
 Right	 Right	 1	 1
 Disc Menu / Rec. End S	 D.Menu / Top	 2	 2
 Up /	 CH+ / Page+	 << / I<<	 I<< / Preset-
 Left	 Left	 3	 3
 Enter	 OK	 >> / >>I	 >>I / Preset+
 Return	 Back / Return	 4	 4
 Down /	 Down	 5	 5
 Stop	 Stop / Hold	 6	 6





Original	Substituto	Original	Substituto
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
	Audio	LANG I/II	Audio / Lang I/II
	Subtitle	EQ	Subtitle / EQ
	Mark	PC FAV MARKER	Fav / Marker / PC
	Search	NETFLIX SEARCH	Red / Netflix / Search
	Angle	ANGLE INFO	Info / Angle
	Zoom	SIZE ZOOM	Zoom / Size
	C.Lock	TIMER SLEEP	Sleep / Timer
	Repeat	APP REPEAT	Green / APP / Repeat
0 / Clear	0	HDMI - BAT	0
0 / Clear	0 / Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Random / CM Skip	Prime Video RANDOM	Blue / Prime Video / Random
	Showview	LIST SMART	Smart / List
	A-B / SP/LP	YouTube REPEAT A-B	Yellow / YouTube / Repeat

Original	Substituto

