



Original	Substituto
	Power
	PP
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	P<P
	0
	--
	Info
	I-II

Original	Substituto
	Up
	P+
	Left
	M
	M
	Right
	Down
	P-
	Vol -
	Vol +
	Red / Sound
	Red / Sound
	Green / Picture
	Green / Picture
	Yellow / Feature
	Blue / Install
	TV



