














 

 

 





 


 







Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/Radio		TV/R
	←PR		Back
	FAV		Pre Ch
	Menu		Menu
	SAT		Smart

Original	Substituto	Original	Substituto
	Info		Info
	Page Up		>>I
	Page Down		I<<
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+ / W		Right
	Left / Vol- / E		Left
	Right / Vol+ / W		Vol +
	Left / Vol- / E		Vol -
	OK / List		Ok
	OK / List		List
	Exit		Exit
	EPG		Guide
	TV/AV		AV
	Pause		Shift + Pause





Original	Substituto	Original	Substituto
PAL/NTSC	Format		
UHF	Media		
Red / Audio	Red		
Red / Audio	Dual		
Green / Position	Green		
Yellow / Subtitle	Yellow		
Yellow / Subtitle	Subt		
Blue / L/R	Blue		
REW	<<		
Play / Slow	Play		
Stop	Stop		
F.F	>>		
Pause (For PVR)	Pause		
Rec	Rec		

