



Original	Substituto	Original	Substituto
	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	I<</Skip Down		I<< / Preset-
	>>I / Skip Up		>>I / Preset+
	Subwoofer		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	SFC		Eject / Surround
	OSD		Picture / Format
	Timer		Sleep / Timer
	TV		TV/Radio /
	Top Menu		D.Menu / Top

Original	Substituto	Original	Substituto
	Setup		Setup / OPT /
	Test		Text / Goto
	TV / AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Angle		Info / Angle
	Left		Left
	Enter / Set		OK
	Right		Right
	Cancel		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Vol+		Vol+
	Page		Smart / List
	CH Select		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media





Original	Substituto	Original	Substituto
1	1	1	
2	2	2	
3	3	3	
4	4	4	
5	5	5	
6	6	6	
7	7	7	
8	8	8	
9	9	9	
≥10 / -/-	GUIDE EPG		Guide / EPG / -/-
0	0		0
REPEAT	APP REPEAT		Green / APP / Repeat
A-B REPEAT	YouTube REPEAT A-B		Yellow / YouTube / Repeat
Power VCR	SHIFT +		Shift + Power
PLAY MODE	SHIFT +		Shift + Play /
MUTING	SHIFT +		Shift + Sound / Title
AUDIO ONLY	SHIFT +		Shift + Audio / Lang I/II

Original	Substituto	Original	Substituto
DOLBY	SHIFT +	DOLBY	Shift + Subtitle / EQ
FM MODE TUNER/BAND	SHIFT +	FM MODE TUNER/BAND	Shift + TV/Radio / Program
SUBWOOFER LEVEL	SHIFT +	SUBWOOFER LEVEL	Shift + D.Menu / Top Menu
GROUP	SHIFT +	GROUP	Shift + Setup / OPT / Tools
TIMER RDS	SHIFT +	TIMER RDS	Shift + AV / Input / RDS
POSITION MEMORY CENTER FOCUS	SHIFT +	POSITION MEMORY CENTER FOCUS	Shift + OK
POSITION MEMORY POSITION	SHIFT +	POSITION MEMORY POSITION	Shift + Smart / List
DVD/CD	SHIFT +	DVD/CD	Shift + 2
FM MODE TUNER/BAND	SHIFT +	FM MODE TUNER/BAND	Shift + 6

