




 
Original	Substituto	Original	Substituto
 Standby	 Power	 HDD/DVD	 Media
 Open / Close	 Eject	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Select	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Setup	 Options
 6	 6	 TV/DVD	 Smart
 7	 7	 Video Source	 AV
 8	 8	 Function	 D. Menu
 9	 9	 Playlist+	 Vol +
 0	 0	 Playlist-	 Vol -
 Search	 Shift + TV/R	 Watch TV	 TV/R
 Clear	 Exit	 Play/Pause	 Play
 Program+	 Ch +	 Play/Pause	 Pause
 Program-	 Ch -	 Stop	 Stop
 Return	 Back	 Record/DUB	 Rec

Original	Substituto	Original	Substituto
 HDD/DVD	 Media	 Up	 Up
 Left	 Left	 Select	 Ok
 Right	 Right	 Down	 Down
 Setup	 Options	 TV/DVD	 Smart
 Video Source	 AV	 Function	 D. Menu
 Playlist+	 Vol +	 Playlist-	 Vol -
 Watch TV	 TV/R	 Play/Pause	 Play
 Play/Pause	 Pause	 Stop	 Stop
 Record/DUB	 Rec		





Original	Substituto
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Search	 <<
 Search >>	 >>
 Edit	 Red
 Insert CHP.	 Green
 Rec Mode	 +  Shift + Rec
 Timer	 +  Shift + AV
 Play Mode	 +  Shift + Play
 Repeat	 Text
 Zoom	 +  Shift + Eject
 A-B	 +  Shift + Text
 Subtitle	 Subt
 Audio	 Dual
 Angle	 Format
 Title	 List
 Menu	 Menu

Original	Substituto
 Display	 Info

