


 



 

 

 















 









 

 

 

 




























Original	Substituto	Original	Substituto
 Standby	 Power	 TV/Radio	 TV/R
 Source	 AV	 Display	 Info
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Mute	 Mute
 9	 9	 EPG	 Guide
 0	 0	 Home	 Smart
 Fav	 Pre Ch	 Vol+	 Vol +
 Recall	 Back	 Vol-	 Vol -
 P.Mode	 Shift + Format	 CH+	 Ch +
 S.Mode	 Shift + Dual	 CH--	 Ch -
 Sleep	 Sleep	 Rec	 Rec





Original	Substituto
T.Shift	Media
Audio	Dual
Size / Aspect	Format
Text	Text
Hold	+ Shift + Stop
Reveal	+ Shift + Pause
Mouse	Options
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
Subtitle	Subt
Index / Reclist	List
<<	<<
>>	>>
I<< / Subpage	I<<
>>I / Mix	>>I
Red	Red

Original	Substituto
Green	Green
Yellow	Yellow
Blue	Blue

