



 

 
 
 

 
 
 

 

 

 

 
 
 
 
 

 
 










Original	Substituto
 Power	 Power
 Source	 AV
 HDMI	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Substituto
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 CH List	 List
 Media.P	 Media
 Menu	 Menu
 FAV.CH	 Shift + Pre Ch
 Tools	 Options
 Info	 Info
 Exit	 Exit
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red





Original	Substituto	Original	Substituto
Green	Green		
Yellow	Yellow		
Blue	Blue		
S.Mode	Dual		
Sleep	Sleep		
MTS	TV/R		
P.Mode	Format		
P.Size	3D		
CC	Subt		
<<<	<<<		
Pause	Pause		
>>>	>>>		
Rec	Rec		
Play	Play		
Stop	Stop		

