




Original	Substituto	Original	Substituto
 Power	 Power	 Up / CH+	 Ch +
 Mute	 Mute	 Down / CH-	 Down
 1	 1	 Down / CH-	 Ch -
 2	 2	 Right / Vol+	 Right
 3	 3	 Right / Vol+	 Vol +
 4	 4	 Left / Vol-	 Left
 5	 5	 Left / Vol-	 Vol -
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 TXT	 Text
 0	 0	 EPG	 Guide
 SUBTL	 Subt	 Info	 Info
 TV / Sat	 AV	 Audio	 Dual
 16:9	 Format	 M-P	 Smart
 Sleep	 Sleep	 Page+	 >>
 Up / CH+	 Up	 Page-	 <<

Original	Substituto	Original	Substituto
 Up / CH+	 Ch +	 TV	 AUX
 Down / CH-	 Down	 DVD	 SAT
 Down / CH-	 Ch -	 PLAY MODE	 REC MODE
 Right / Vol+	 Right	 FF	 II
 Right / Vol+	 Vol +	 ▶	 ■
 Left / Vol-	 Left	 RR	 ⏸
 Left / Vol-	 Vol -	 DISC NAV	 SOUND
 OK	 Ok	 AD	 SETTINGS
 Menu	 Menu	 LIST	 DUAL
 Exit	 Exit	 SUBT	 OPT
 TXT	 Text	 PROG	 SEARCH
 EPG	 Guide	 PICTURE	 ECO
 Info	 Info	 SLEEP	 TV/R
 Audio	 Dual	 E-MANUAL	 REPEAT
 M-P	 Smart	 D.MENU	 TEXT
 Page+	 >>	 ZOOM	 TIMER
 Page-	 <<	 M-P	 AV



