



Original	Substituto	Original	Substituto
Standby	Power	Title / TTX	Text / Goto
Mute	Mute / Dimmer	Source	AV / Input / RDS
Play	Play / Slow	Menu / PBC	Menu / Home
Pause	Pause / Step / Freeze	Up	Up
Stop	Stop / Hold	Left / Fav-	Left
Rec	Rec / Rec Mode	Enter	OK
<<	<< / Tune-	Right / Fav+	Right
>>	>> / Tune+	Clear	Exit / Cancel / Clear
I<<	I<< / Preset-	Down	Down
>>I	>>I / Preset+	Return	Back / Return
Language	Audio / Lang I/II	Vol+	Vol+
SUBT / RIP	Subtitle / EQ	L/R	Smart / List
Open / Close	Eject / Surround	Vol-	Vol-
Zoom	Zoom / Size	OSD	Display / Media
Time	Sleep / Timer	1	1
TV / Radio	TV/Radio /	2	2
Setup	Setup / OPT /	3	3



