



Original	Substituto	Original	Substituto
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 TV Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 5	 Volume-	 Vol-
 AUX1	 Shift + 7	 Eco	 D.Menu / Top
 Tuner	 Shift + 6	 Info	 Info / Angle
 Bluetooth	 Shift + 9	 Up	 Up
 Game	 Shift + Fav / Marker / PC	 Option	 Shift + Setup / OPT / Tools
 AUX2	 Shift + Guide / EPG / -/-	 Left	 Left
 Phono	 Shift + 4	 Right	 Right
 USB	 Shift + 8	 Back	 Back / Return
 Media Player	 Display / Media	 Down	 Down
 CD	 Shift + 3	 Setup	 Setup / OPT /
 Online Music	 Smart / List	 Home	 Menu / Home
 Internet Radio	 Shift + Smart / List	 Stop	 Stop / Hold
 CH/Page+	 CH + / Page+	 Pause	 Pause / Step / Freeze





Original	Substituto
	Play / Slow
	Tune- / Preset-
	+  Shift + Tune- / << /
	Tune+ / Preset+
	+  Shift + Tune+ / >> /
	<< / Tune-
	>> / Tune+
	+  Shift + Red / Netflix / Search
	+  Shift + Green / APP / Repeat
	+  Shift + Yellow / YouTube / Repeat A-B
	+  Shift + Blue / Prime Video / Random
	Green / APP / Repeat
	Red / Netflix / Search
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	1
	2

Original	Substituto
	3
	4
	5
	6
	7
	8
	9
	0
	OK






Original	Substituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH + / Page+

Original	Substituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+







Original	Substituto	Original	Substituto
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 TV Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 5	 Volume-	 Vol-
 AUX1	 Shift + 7	 Up	 Up
 Tuner	 Shift + 6	 Left	 Left
 Bluetooth	 Shift + 9	 Right	 Right
 Game	 Shift + Fav / Marker / PC	 Back	 Back / Return
 AUX2	 Shift + Guide / EPG / -/-	 Down	 Down
 Phono	 Shift + 4	 Home	 Menu / Home
 USB	 Shift + 8	 Stop	 Stop / Hold
 Media Player	 Display / Media	 Pause	 Pause / Step / Freeze
 CD	 Shift + 3	 Play	 Play / Slow
 Online Music	 Smart / List	 I<</Tune-	 Shift + << /
 Internet Radio	 Shift + Smart / List	 I<</Tune-	 I<< / Preset-
 CH/Page+	 CH+ / Page+	 >>I/Tune+	 >>I / Preset+



