 
 
 
 
 
 




Original	Substituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/--
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Eco	 D.Menu / Top
 Info	 Info / Angle
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze





Original	Substituto
	Play
	Play / Slow
	I<</Tune-
	I<</Tune-
	Shift + << /
	Shift + << /
	>>I/Tune+
	>>I / Preset+
	Shift + >> /
	Shift + >> /
	<< / Tune-
	<< / Tune-
	>> / Tune+
	>> / Tune+
	Smart Select 1
	Smart Select 2
	Smart Select 3
	Smart Select 4
	Green / APP / Repeat
	Red / Netflix / Search
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	1
	2

Original	Substituto
	3
	4
	5
	6
	7
	8
	9
	0
	Enter
	OK
	TV
	DVD
	SAT
	AUX
	SLOW
	STEP-FREEZE
	HOLD
	REC MODE
	TUNE-
	TUNE+
	PRESET-
	PRESET+
	TITLE
	LANG
	EQ
	SURROUND
	SOUND
	AUDIO
	SUBTITLE
	PROGRAM
	FORMAT
	SIZE
	TIMER
	TV RADIO
	TOP MENU
	OPT-TOOLS
	GOTO
	RDS
	D.MENU
	SETUP
	TEXT
	AV INPUT
	HOME
	MENU
	ANGLE
	INFO
	OK
	RETURN
	BACK
	CLEAR
	EXIT
	CANCEL
	LIST
	SMART
	MEDIA
	DISPLAY
	CH PAGE
	TV
	DVD
	CD - STB
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	GUIDE EPG
	HDMI - SAT
	PC
	FAV MARKER
	NETFLIX
	APP
	YouTube
	Prime Video
	SEARCH
	REPEAT
	REPEAT A-B
	RANDOM





Original	Substituto
 Power	 Power
 CBL/SAT	 +  Shift + 0
 DVD	 +  Shift + 2
 TV Audio	 +  Shift + 1
 Blu-ray	 +  Shift + 5
 AUX1	 +  Shift + 7
 Tuner	 +  Shift + 6
 Bluetooth	 +  Shift + 9
 Game	 +  Shift + Fav / Marker / PC
 AUX2	 +  Shift + Guide / EPG / -/--
 Phono	 +  Shift + 4
 USB	 +  Shift + 8
 Media Player	 Display / Media
 CD	 +  Shift + 3
 Online Music	 Smart / List
 Internet Radio	 +  Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 +  Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+







Original	Substituto
 Power	 Power
 CBL/SAT	 +  Shift + 0
 DVD	 +  Shift + 2
 TV Audio	 +  Shift + 1
 Blu-ray	 +  Shift + 5
 AUX1	 +  Shift + 7
 Tuner	 +  Shift + 6
 Bluetooth	 +  Shift + 9
 Game	 +  Shift + Fav / Marker / PC
 AUX2	 +  Shift + Guide / EPG / -/--
 Phono	 +  Shift + 4
 USB	 +  Shift + 8
 Media Player	 Display / Media
 CD	 +  Shift + 3
 Online Music	 Smart / List
 Internet Radio	 +  Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 +  Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+



