



Original	Substituto	Original	Substituto
	Power		Power
	Review		Smart / List
	Left/ <</-		Left
	Left/ <</-		<< / Preset-
	Right/>> /+		Right
	Right/>> /+		>> / Preset+
	Tv/VCR		AV / Input / RDS
	--:--		Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	X		Back / Return
	9		9
	0		0
	Timer		Sleep / Timer
	PR+		CH+ / Page+
	Start Debut +		Green / APP / Repeat
	Start Debut -		Red / Netflix / Search
	Stop Fin +		Blue / Prime Video / Random
	PR-		CH- / Page-
	Stop Fin -		Yellow / YouTube / Repeat
	Date-		Vol-
	Date+		Vol+
	Prog		TV/Radio /
	<<		<< / Tune-
	30 Sec/>>		Display / Media
	Timer/?		Shift + Sleep / Timer
	Play		Play / Slow





Original	Substituto
TV	Guide / EPG / -/--
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Menu	Menu / Home
OK	OK
Up	Up
Down	Down
Tv Vol-	Shift + Vol-
Tv Vol+	Shift + Vol+
Tv PR-	Shift + CH- /
Tv PR+	Shift + CH+ /
Tv/VCR Tv	Shift + AV / Input / RDS
Power Tv	Shift + Power
Mute Tv	Shift + Mute / Dimmer

Original	Substituto

