



 


Original	Substituto
 Power	 Power
 I<<	 I<<
 Open/Close	 Eject
 <<	 <<
 >>	 >>
 >>	 >>
 Play/Pause	 Play
 TV/TXT/Langua	 Text
 Cancel/Zoom	 Shift + Eject
 Reveal/Subtitle	 Subt
 Stop	 Stop
 Hold/Menu	 D. Menu
 Size/Angle	 Format
 Subpage/Title	 Options
 Index/Goto	 Media
 Red/Program	 Red
 Green/Slow	 Green

Original	Substituto
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue
 CH+	 Ch +
 CH-	 Ch -
 Tv-Menu	 Menu
 TV/AV	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 DTV	 Smart
 DVD Setup	 Shift + Menu
 Exit	 Exit
 Display	 Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Original	Substituto	Original	Substituto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall	 + 	Pre Ch
	Picture	 +  + 	Shift + Format
	Sound	 +  + 	Shift + Dual
	Nicam/A2	 + 	Dual
	Mute		Mute
	Sleep	 + 	Sleep

Original	Substituto	Original	Substituto
	Info	 + 	Info
	Subtitle	 +  + 	Shift + Subt
	Channel List	 + 	List
	EPG	 + 	Guide
	Tv/Radio	 + 	TV/R
	FAV	 +  + 	Shift + Pre Ch
	Aspect	 + 	3D

